



Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
OIL COOLER AND FILTER—1000, 1001 & 1300					
1	13H 3817	Hose—cooler	1] 1300
2	21A 1780	Adaptor—hose	1		
3	AED 172	Gasket—adaptor	2] 1300
4	AXE 23	Cooler—oil	1		
5	AXE 24	Screw	4		
6	PWZ 203	Washer—plain	4		
7	LWZ 203	Washer—spring	4		
8	AXE 88	Hose—cooler to filter	1		
9	AHA 6423	Adaptor—hose to filter	1		
14	88G 402	Gasket—filter to crankcase	1] 1000 & 1001
	12A 1726	FILTER ASSEMBLY—OIL	1		
17	GFE 103	ELEMENT—FILTER	1		
18	12A 1591	Seal—sump to head	1		
19	17H 1169	Body—oil filter	1		
20	17H 1173	Seal—centre bolt	1		
21	17H 1172	Collar—centre bolt	1		
22	37H 689	Bolt—centre	1		
23	17H 1148	Plate—pressure	1		
24	7H 28	Seal	1		
25	PWN 106	Washer	1		
26	7H 25	Spring—plate	1		
27	FNZ 106	Nut	2		
28	LWZ 506	Washer—spring	2		
10	88G 538	Pipe—oil filter to crankcase	1		
11	2A 715	Screw—banjo	1		
12	12A 1768	Washer—banjo screw (copper)	1		
15	TCZ 106	Connector—flared	1		

OIL FILTER—MINIMATIC

	12A 1592	FILTER—OIL	1	
29	37H 1480	HEAD—FILTER	1	
30	12A 1591	Seal—sump to head	1	
31	GFE 104	Element	1	
32	27H 2573	Circlip—centre bolt	1	
33	7H 21	Plate—pressure	1	
34	7H 28	Seal	1	
35	WA 110061	Washer—plain	1	
36	7H 25	Spring—pressure plate	1	
37	37H 140	Sump	1	
38	17H 1173	Seal—centre bolt	1	
39	27H 1143	Collar—centre bolt	1	
40	27H 6799	Bolt—centre	1	
42	22A 1388	Gasket—filter to cover	1	
43	HCZ 0713	Bolt—filter to front cover (short)	1	
43	HCZ 0730	Bolt—filter to front cover (long)	1	
44	LWZ 307	Washer—spring	2	
45	22A 1203	Plate—blanking—filter face	1	
46	88G 402	Gasket—blanking plate	1	
47	SH 506071	Screw—blanking plate	2	
48	12G 1058	Washer (copper)	2	