



Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
		STEERING			
	21A 2134	STEERING ASSEMBLY	1		Use 21A 2510
	21A 2510	STEERING ASSEMBLY	1		
1	8G 8625	SOCKET ASSEMBLY-BALL	2		
2	17H 3484	Boot	2		
3	27H 4830	Circlip	2		
4	LNZ 206	Nut	2		
5	FNZ 208	Nut	2		
6	37H 2078	Housing-ball	2		
7	17H 8864	Tie-rod	2	} Change point not available	
8	37H 1443	Seat-ball	2		
10	CCA 13	Spring-thrust	2	} Change point not available	
18	18G 8343	Kit-rack and pinion	1		
7	37H 7430	Tie-rod	2		
8	37H 7429	Seat-ball	2		
10	37H 7428	Spring-thrust	2		
72	37H 7431	Plate-backing	2		
18	18G 8968	Kit-rack and pinion	1		
9	17H 6379	Nut-lock	2		
11	37H 3782	HOUSING ASSEMBLY	1		
12	27H 2079	Housing-bush	1		
13	21A 1797	Bush	2		
14	BTA 786	Washer-bush	1		
15	PTZ 603	Screw-bush	1		
16	17H 8263	Bearing	2		
17	37H 2077	Spacer-pinion	1		
19	27H 8466	Shim-0.127 mm	A/R		
19	27H 8467	Shim-0.191 mm	A/R		
19	27H 8468	Shim-0.254 mm	A/R		
20	27H 8469	Bearing-pinion	1		
21	CCA 27	Washer	1		
22	CCA 23	Cover-end	1		
23	HCS 0506	Bolt-cover	2		
24	WL 600051	Washer-spring	2		
25	17H 3988	Washer-sealing	1		
26	37H 2084	Yoke-rack support	1		
27	BTA 761	Spring-thrust	1		
28	37H 2085	'O' ring	1		
29	BTA 703	Shim-0.061 mm	A/R		
29	BTA 704	Shim-0.127 mm	A/R		
29	BTA 705	Shim-0.254 mm	A/R		
30	AXE 343	Plate-cover	1		
31	AXE 45	Bolt	2		
32	WL 600051	Washer-spring	2		
33	ACH 5854	Clip-seal-outer	2		
34	CCA 35	Clip-seal-inner	2		
35	17H 6298	Seal-rack	2		
36	37H 3780	Plug-housing	1		

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	Remarks
STEERING--continued					
37	2A 6208	'U' bolt--rack toeboard	2		
38	LNZ 205	Nut--'U' bolt	4		
39	21A 30	Washer--sealing	1		
40	AXE 300	Column--outer	1		
41	AXE 301	Column--inner	1		
42	AXE 302	Bearing--column--lower	1		
43	AXE 334	Cover	1		
44	AXE 303	Bearing--column--top	1		
45	21A 2138	Clip--column to bracket	1		
46	HBZ 0411	Bolt--inner column--lower	1		
47	NH 604041	Nut	1		
73	21A 2242	Bracket--clip to body	1		
49	HBZ 0518	Bolt--clip to bracket	1		
50	WA 108051	Washer--plain	1		Required when steering lock not fitted
51	LNZ 205	Nut--bolt	1		
52	HZS 0507	Screw--support bracket	2		
53	FNZ 105	Nut--screw	2		
54	AXE 667	Washer--plain	2		
55	LNZ 305	Washer--spring	2		
56	AXE 447	Wheel--steering	1		1000 & Minimatic 1300 1001
57	AXE 298	Wheel--steering	1		
56	AXE 509	Wheel--steering	1		
58	ACH 6001	Nut	1		
59	53K 3480	Washer--spring	1		
60	AXE 299	Contact ring	1		
70	AXE 441	LOCK ASSEMBLY--STEERING--KEY	1		
71	AXE 138	Key	2		
48	21A 2463	Bracket--clip to body	1		
63	51K 4002	Bolt--shear	2		
61	51K 4006	Bolt--shear	1		Required when steering lock is fitted
62	21H 295	Nut--captive	1		
65	21H 295	Nut--captive	1		
66	21A 2466	Plate	2		
64	PWZ 205	Washer	1		
67	21A 2553	Strip--anti-friction	2		
68	AXE 668	Plate--connecting	1		
69	AXE 669	Cable--earth--housing	1		