



MG 0372

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
BRAKE PIPING					
1	13H 5905	Switch—failure	1		1300
2	13H 5848	Switch—pressure failure	1		1300
3	AXE 448	Connector (3-way)	1		1000, 1001 & Minimatic
4	AXE 210	Pipe—failure switch to pressure regulating valve	1		
5	AXE 117	Switch—stop light	1		
6	HZS 0408	Screw—failure switch and 3-way connector	1		
6	AXE 468	Screw—3-way	1		Minimatic
7	LWZ 204	Washer—spring	1		
8	ADA 464	Piece—distance	1		Minimatic
9	AXE 248	Bolt—connector	1		
10	3H 550	Washer—bolt and stop light switch	2		
11	21A 42	Pipe—2-way to LH front hose	1		
12	AXE 245	Connector (2-way)	1		
13	3H 2287	Washer	1		
14	2K 8686	Nut	1		
15	LWZ 510	Washer—shakeproof	1		
16	GBH 101	Hose—front—brakes	2		
17	3H 2287	Washer	2		
18	11K 9181	Clip	2		
19	21A 2192	Clip	2		
20	PTZ 1005	Screw—clip	2		
21	2K 8686	Nut	1		
22	LWZ 510	Washer—shakeproof	1		
23	21A 1774	VALVE ASSEMBLY—PRESSURE LIMITING	1		1300
23	21A 2031	VALVE ASSEMBLY—PRESSURE LIMITING	1		1000, 1001 & Minimatic
24	17H 7630	Plug	1		
25	11D 5082	Gasket	1		
26	27H 6620	Spring	1		1300
26	37H 2009	Spring	1		1000, 1001 & Minimatic
	18G 8073	Kit—repair	1		
27	21A 47	Pipe—pressure valve to RH rear hose	1		
28	HZS 0404	Screw—valve	1		
29	LWZ 204	Washer—spring	1		
30	AXE 682	Sleeve—protection	7		
31	21A 51	Pipe—pressure valve to LH rear hose	1		
32	21A 220	Pipe—RH rear hose to RH rear wheel cylinder	1		
33	GBH 115	Hose—rear—brake	2		
34	21A 222	Pipe—LH rear hose to LH rear wheel cylinder	1		
35	FNZ 106	Nut	2		
36	LWZ 506	Washer—lock	4		
37	FNZ 206	Nut	2		
38	AXE 344	Pipe—master cylinder to pressure switch—front brakes	1] 1300
39	AXE 345	Pipe—master cylinder to pressure switch—rear brakes	1		
40	AXE 346	Pipe—pressure switch to servo	1		
41	AXE 347	Pipe—servo to 2-way	1		
42	AXE 449	Pipe—3-way to master cylinder	1] 1000, 1001 & Minimatic
43	21A 1900	Pipe—3-way to front hose	1		