



38-39-018

III. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
FLYWHEEL AND CLUTCH—continued					
33	GCC 102	HOUSING ASSEMBLY—DIAPHRAGM			1000 & 1001
		SPRING	1		
34	22G 364	Plate—release	1		1300
33	GCC 103	HOUSING ASSEMBLY—DIAPHRAGM			
		SPRING	1		
34	22G 1152	Plate—release	1		1000, 1001 & 1300
35	22A 921	Circlip	1		
36	2A 3657	Screw—housing to plate	3		
37	LWZ 406	Washer—plain	3		
38	GRB 201	Bearing—clutch release	1		
39	88G 300	Cover—clutch	1		
40	53K 146	Screw—cover	8		
41	LWZ 305	Washer—spring	8		
42	2A 3635	Cover—timing hole	1		
43	HZS 0404	Screw	2		
44	LWZ 304	Washer—spring	2		
45	22A 180	Plunger—clutch throw-out	1		
46	22A 427	Stop—plunger	1		
47	FNZ 210	Nut	1		
48	2A 3518	Lever—clutch withdrawal	1		
49	CLZ 0628	Pin—clevis	1		
50	WA 110061	Washer—plain	1		
51	HZS 0409	Screw	1		
52	FNZ 604	Nut	1		
53	1G 5999	Spring—clutch withdrawal lever	1		
54	2A 3601	Anchor—spring—lever end	1		
55	2A 3600	Anchor—spring—cylinder end	1		
56	CLZ 0518	Pin—clevis	1		
57	PWZ 105	Washer—plain	1		