



38-39-014

III. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
FUEL PUMP					
	AUF 214	PUMP ASSEMBLY—FUEL	1		
1	AUA 1453	Screw—plate	2		
2	AXE 635	Plate	1		
3	AUB 663	Banjo	2		
4	AUB 676	Washer—sealing	3		
5	AUB 617	Filter	1		
6	AUB 6062	Valve	2		
7	AUB 613	Body	1		
8	AUB 758	Spring—armature	1		
9	AUB 6097	Diaphragm	1		
10	AUB 849	Washer—sealing	1		
11	AUB 794	Roller	11		
12	AUA 699	Screw—earth	1		
13	AUA 585	Washer—spring	1		
14	AXE 636	Screw—coil	6		
15	AUB 6080	HOUSING—COIL	1		
16	AXE 637	Tag—terminal	1		
17	AXE 638	Tag—terminal	1		
18	AUB 6106	ROCKER AND BLADE	1		
19	AUA 6036	Blade	1		
20	AXE 638	Tag—terminal	1		
21	AUA 1435	Spindle—contact breaker	1		
22	AXE 639	Screw—terminal	1		
23	88G 534	Pedestal	1		
24	AXE 640	Washer—spring	1		
25	AUC 5047	Screw	1		
26	AUA 1863	Washer—spring	3		
27	AUA 1459	Screw—pedestal	2		
28	AXE 641	Washer	1		
29	AUA 1661	Nut—recessed	1		
30	AUA 1662	Washer—lead	1		
31	AUE 399	Cover—end	1		
32	AXE 642	Washer—spring	1		
33	AUA 692	Connector—Lucar	1		
34	AUA 878	Nut—cover	1		
35	AXE 643	Sleeve—insulating	1		
36	NSP				
37	AUB 716	Ring—sealing	1		
38	AXE 644	Valve—ventilator	1		
39	AXE 645	Ball—valve	1		
40	AXE 646	Cap—ventilator	1		