



Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
<b>SUB FRAME AND ENGINE MOUNTINGS</b>					
1	AXE 160	Stud—sub-frame tower to bulkhead cross-member	4		
2	21A 2341	Pad—pressure	2		
3	NH 605041	Nut	4		
4	LWZ 405	Washer	4		
5	PWZ 205	Washer—plain	4		
6	21A 2570	Sub-frame—front	1		1000, 1001 & 1300
	21A 1816	Sub-frame—front	1		Minimatic
7	2A 4292	Packing—front end	4		
8	21A 1220	Eyebolt—towing	2		
9	FNZ 506	Nut	2		
10	LWZ 206	Washer—spring	2		
11	WA 110061	Washer—plain	2		
12	HZS 0508	Bolt	4		
13	WA 108051	Washer—plain	4		
14	PWZ 205	Washer—plain	4		
15	WL 600051	Washer—spring	4		
16	NH 605041	Nut	4		
17	21A 2163	SUB-FRAME ASSEMBLY—REAR	1		
18	21A 195	Bracket—outer—radius arm—RH	1		
18	21A 197	Bracket—outer—radius arm—LH	1		
19	HZS 0506	Screw	2		
20	WL 600051	Washer—spring	2		
21	WA 108051	Washer—plain	2		
22	HZS 0506	Screw	6		
23	WL 600051	Washer—spring	6		
24	WA 108051	Washer—plain	6		
25	2A 5819	Trunnion—support pin	2		
26	2A 5815	Pin—front support	2		
27	2A 5818	Bush—support pin (rubber)	4		
28	LNZ 207	Nut	2		
29	PWZ 107	Washer—plain	2		
30	HZS 0508	Screw—support pin	2		
31	HZS 0518	Screw—support pin	2		
32	WL 600051	Washer—spring	2		
33	2A 5819	Trunnion—support pin	2		
34	2A 5818	Bush—support pin (rubber)	4		
35	LNZ 207	Nut	2		
36	PWZ 207	Washer—plain	2		
37	HBZ 0510	Screw—support pin	2		
38	HBZ 0520	Screw—support pin	2		
39	WA 108051	Washer—plain	4		
	LNZ 205	Nut	4		