



38-39/6-026

Ill. No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
<b>STOP, TAIL AND FLASHER LAMPS AND SWITCHES</b>					
1	AXE 126	Bracket—horn and solenoid	1		1000, 1001
	AXE 471	Bracket—horn	1		Minimatic
2	ZCS 0505	Bolt	2		] 1000 & 1001
3	LWZ 305	Washer	2		
4	AXE 510	Horn	1		] 1000, 1001 & Minimatic
5	ZCS 0505	Bolt	2		
6	LWZ 305	Washer	2		] 1000 & 1001
7	NH 605041	Nut	2		
8	LWZ 305	Washer	2		
9	AXE 115	Switch—door	2		
10	AXE 146	Gasket	2		
11	CTZ 604	Screw	2		
12	AXE 143	Box—control	1		] 1300
13	PTZ 804	Screw	2		
14	AXE 273	Switch—direction indicator	1		Switzerland, France and Benelux countries
15	AXE 147	Cowl—upper	1		
16	AXE 148	Cowl—lower	1		
17	AXE 283	Screw	4		
18	AXE 144	Push—horn	1		1300
18	AXE 450	Push—horn	1		1000, 1001 & Minimatic
19	AXE 114	Unit—flasher (12V, 46W)	1		
21	AXE 125	Horn	1		] 1300
23	AXE 284	Mounting (rubber)	2		
24	NH 604041	Nut	4		
25	WL 600051	Washer—spring	4		
26	AXE 266	Switch—reverse light	1		
27	AXE 305	Lens—number plate lamp	1		
28	AXE 81	Nut	2		
29	AXE 106	Washer—spring	2		
30	AXE 103	Bulb (12V, 5W)	2		
31	AXE 66	Plate—lamp mounting	1		
32	AXE 285	Bulb—festoon	1		
	AXE 77	LAMP ASSEMBLY STOP/TAIL—FLASHER—RH	1		] Altissimo
	AXE 78	LAMP ASSEMBLY STOP/TAIL—FLASHER—LH	1		
33	AXE 94	Gasket—lamp seating—RH	1		
	AXE 95	Gasket—lamp seating—LH	1		
34	AXE 99	Gasket—lens	2		
35	AXE 79	Lens—RH	1		
	AXE 80	Lens—LH	1		
36	AXE 96	Bolt—lens	2		
37	AXE 98	Bolt—lens	2		
38	AXE 89	Washer—plain	6		
39	AXE 97	Bolt—lens	2		
	AXE 1689	LAMP ASSEMBLY STOP/TAIL—FLASHER—RH	1		] Carello
	AXE 1690	LAMP ASSEMBLY STOP/TAIL—FLASHER—LH	1		
33	AXE 1693	Gasket—lamp seating—RH	1		
	AXE 1694	Gasket—lamp seating—LH	1		
	AXE 1695	Gasket—lens—RH	1		
	AXE 1696	Gasket—lens—LH	1		
35	AXE 1691	Lens—RH	1		
	AXE 1692	Lens—LH	1		
	AXE 1697	Bolt—lens	6		
40	AXE 107	Nut	8		
41	AXE 108	Washer	8		
42	PWZ 203	Washer—plain	8		1000 & 1001
42	AXE 443	Washer	8		1300 & Minimatic
43	AXE 104	Bulb—stop/tail (12V 21W)	4		
44	AXE 101	Bulb—flasher (12V 5/21W)	2		
	AXE 440	Switch—hand brake warning light	1		1300